

**NETSTAR**

# **OBDII GPS Vehicle Tracker**

## User Manual

Issue 1  
August 2024

# **WELCOME TO NETSTAR'S PLUG & PLAY FLEET TRACKING SOLUTION**

## **Track Your Fleet with Ease**

Introducing the Netstar OBDII GPS Vehicle Tracker – your economical and effortless solution for fleet management. With seamless installation, this compact device offers reliable performance, utilising LTE CAT M1 network coverage.

## **Optimise Performance & Enhance Safety**

Monitor your fleet with near real-time tracking, ensuring you stay connected to your vehicles at all times. The Netstar OBDII GPS Vehicle Tracker is designed to help you optimise vehicle performance, enhance safety, and streamline fleet operations.

## **Stay Connected with MyNetstar**

Access all the data you need through MyNetstar, our user-friendly app. Whether you're checking vehicle locations or sharing your position with loved ones, MyNetstar keeps you in control. Download the app on the App Store or Google Play and take the first step towards smarter fleet management.

## TABLE OF CONTENTS

Safety Information	4
Product Overview	6
Installation Instructions	7
Default Configuration Settings	9
LED indications	10
Basic characteristics	11
Warranty	15
Warranty Disclaimer	15
Contact us	16

## SAFETY INFORMATION

This message contains information on how to operate OBDII GPS Vehicle Tracker safely. By following these requirements and recommendations, you will avoid dangerous situations. You must read these instructions carefully and follow them strictly before operating the device!

- The device uses SELV limited power source. The nominal voltage is +12 V DC. The allowed voltage range is +10...+30 V DC.
- To avoid mechanical damage, it is advised to transport the device in an impact-proof package. Before usage, the device should be placed so that its LED indicators are visible. They show the status of device operation.
- Before disconnecting the device from vehicle, ignition **MUST** be OFF.



Do not disassemble the device. If the device is damaged, the power supply cables are not isolated or the isolation is damaged, DO NOT touch the device before unplugging the power supply.



All wireless data transferring devices produce interference that may affect other devices which are placed nearby.



Please consult representatives of your vehicle model regarding OBDII location on your vehicle. In case you are not sure about proper connection, please consult qualified personnel.



Installation and/or handling during a lightning storm is prohibited.



The device is susceptible to water and humidity.



Netstar is not responsible for any harm caused by wrong cables used for connection between PC and OBDII GPS Vehicle Tracker



**WARNING!** Do not use OBDII GPS Vehicle Tracker device if it distracts driver or causes inconvenience due to OBDII placement. Device must not interfere with driver.




Battery should not be disposed of with general household waste. Bring damaged or worn-out batteries to your local recycling centre or dispose them to battery recycle bin found in stores.

# OBDII GPS VEHICLE TRACKER

## PRODUCT OVERVIEW


### Top View

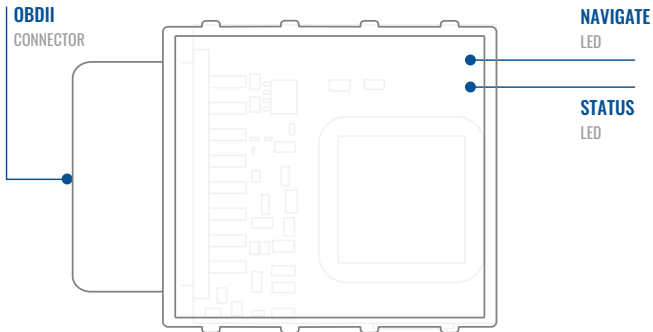

## INSTALLATION INSTRUCTIONS

### Connecting Device

1. The OBDII GPS Vehicle Tracker device should be plugged directly into the vehicles OBDII port or via the optional splitter cable.\*
2. Most common OBDII connector locations:

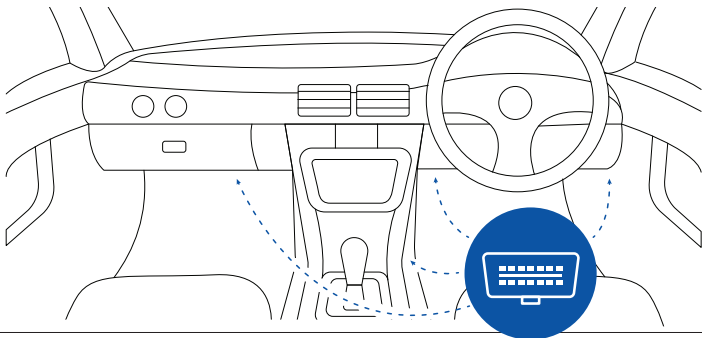

### **Connecting Device (continued)**

3. Once connected, start the engine and leave the OBDII GPS Vehicle Tracker device plugged into the OBD-II port for a minimum of 30 seconds. This allows the device to boot up and connect to GPS satellites and the mobile data network.
4. Turn engine off and ensure the vehicle is outside and not under cover to avoid delays.

\* When installing the OBDII GPS Vehicle Tracker, avoid places where the device can be easily knocked out of place. If this is an issue you may need the Optional OBDII GPS Vehicle Tracker OBDII splitter cable. The OBDII GPS Vehicle Tracker device can be mounted under the dash with the use of the OBDII GPS Vehicle Tracker OBDII splitter cable. Call Netstar Support at 1300 728 882 if additional assistance is required.

### **MyNetstar App**

1. Download MyNetstar App in App Store or Google Play Store.
2. Login or Register your account.
3. Follow on screen prompts to activate your OBD-II GPS Vehicle Tracker.



## Default Configuration Settings

### MOVEMENT AND IGNITION DETECTION:



Vehicle movement will be detected by accelerometer

### DEVICE MAKES A RECORD ON STOP IF:



6 hour passes while vehicle is stationary and ignition is off

### RECORDS SENDING TO SERVER:



Every 60 seconds it is sent to the server if device has made a record

### DEVICE MAKES A RECORD ON MOVING IF ONE OF THESE EVENTS HAPPEN:



Passes 60 seconds



Overspeed 130kmh



Vehicle turns 35 degrees

## LED Indications

### NAVIGATION LED INDICATIONS

BEHAVIOUR	MEANING
Permanently switched on	GNSS signal is not received
Blinking every second	Normal mode, GNSS is working
Off	GNSS is turned off because: Device is not working or Device is in sleep mode
Blinking fast constantly	Device firmware is being flashed

### STATUS LED INDICATIONS

BEHAVIOUR	MEANING
Blinking every second	Normal mode
Blinking every two seconds	Sleep mode
Blinking fast for a short time	Modem activity
Off	Device is not working or Device is in boot mode

## Basic Characteristics

### MODULE

Name	Quectel BG95-M3, Teltonika TM2500
Technology	LTE CAT M1/CAT NB2/EGPRS/GNSS

### GNSS

GNSS	GPS, GLONASS, GALILEO, BEIDOU, SBAS, QZSS, DGPS, AGPS
Receiver	33 channel
Tracking sensitivity	-165 dBm
Accuracy	< 3 m
Hot start	< 1 s
Warm start	< 25 s
Cold start	< 35 s

## CELLUAR

Technology	LTE CAT M1, CAT NB2
2G bands	EGPRS: B2/B3/B5/B8
4G bands	CAT M1: LTE-FDD: B1/B2/B3/B4/B5/B8/B12/B13/B18/B19/B20/B25/B26/B27/B28/B66/B85 CAT NB2: LTE-FDD: B1/B2/B3/B4/B5/ B8/B12/B13/B18/B19/B20/B2/B28/ B66/B71/B85
Data transfer	BG95: LTE: Max. 588Kbps (DL)/Max.1119Kbps (UL) GPRS: Max. 107Kbps (DL)/Max.85.6Kbps (UL)
Maximum output power	Class 4 for GSM850/900: 33±2dBm Class 1 for GSM1800/1900: 30±2dBm Class 3 for LTE-TDD: 20±2dBm Class 3 for LTE-FDD: 20±2dBm

## POWER

Input voltage range	10 - 30 V DC with overvoltage protection
Back-up battery	170 mAh Li-Po battery 3.7 V (0.63 Wh)
Internal fuse	3A, 125V
Power Consumption	BG95: LTE: Max. 588Kbps (DL)/Max.1119Kbps (UL) GPRS: Max. 107Kbps (DL)/Max.85.6Kbps (UL)  At 12V < 6.5 mA (Ultra Deep Sleep) At 12V < 8 mA (Deep Sleep) At 12V < 13 mA (Online Deep Sleep) At 12V < 16.3 mA (GPS Sleep) At 12V < 31 mA (nominal with no load) At 12V < 0.25A Max. (with full Load/ Peak)

## INTERFACE

Connection	OBDII socket
GNSS antenna	Internal High Gain
GSM antenna	Internal High Gain
LED indication	2 status LED lights
SIM	Micro-SIM Pre-fitted
Memory	128MB internal flash memory

## PHYSICAL SPECIFICATION

Dimensions	67,2 x 49,6 x 25 mm (L x W x H)
Weight	63 g

## OPERATING ENVIRONMENT

Operating temperature (without battery)	-40 °C to +85 °C
---	------------------

Storage temperature (without battery)	-40 °C to +85 °C
---------------------------------------	------------------

Operating humidity	5% to 95% non-condensing
--------------------	--------------------------

Operating temperature (with battery)	-20 °C to +40 °C
--------------------------------------	------------------

Ingress Protection Rating	IP41
---------------------------	------

## OPERATING ENVIRONMENT (continued)

Battery charge temperature	0 °C to +45 °C
----------------------------	----------------

Battery discharge temperature	-20 °C to +60 °C
-------------------------------	------------------

Battery storage temperature	-20 °C to +45 °C for 1 month -20 °C to +35 °C for 6 months
-----------------------------	---

## FEATURES

Sensors	Accelerometer
---------	---------------

Configuration and firmware update	Over the air - OTA
-----------------------------------	--------------------

Time Synchronisation	GPS, NITZ, NTP
----------------------	----------------

Ignition detection	Accelerometer
--------------------	---------------

## Warranty

Our products come with a 12-month warranty<sup>1</sup> period. All batteries carry a 6-month warranty period.

Post-warranty repair service for products is not provided.

If a product stops operating within this specific warranty time, the product can be:

- Repaired
- Replaced with a new product
- Replaced with an equivalent repaired product fulfilling the same functionality
- Replaced with a different product fulfilling the same functionality in case of EOL for the original product

**Warranty Disclaimer:** Customers are only allowed to return products as a result of the product being defective, due to order assembly or manufacturing fault. Products are intended to be used by personnel with training and experience. Warranty does not cover defects or malfunctions caused by accidents, misuse, abuse, catastrophes, improper maintenance or inadequate installation – not following operating instructions (including failure to heed warnings) or use with equipment with which it is not intended to be used. Warranty does not apply to any consequential damages. Warranty is not applicable for supplementary product equipment (i. e. PSU, power cables, antennas) unless the accessory is defective on arrival.

<sup>1</sup> Additional agreement for an extended warranty period can be agreed upon separately.

## CONTACT US



North Building, Level 2,  
22 Giffnock Avenue,  
Macquarie Park, NSW, 2113



1300 728 882



[customersupport@netstaraus.com.au](mailto:customersupport@netstaraus.com.au)



[netstaraustralia.com.au](http://netstaraustralia.com.au)

